



Turn cartridge upside down and gently put the syringe between the airway and the outer wall of the cartridge and fill the

Notes:

1. Do not inject the oil into the airway!
2. Do not inject more than one milliliter of oil.

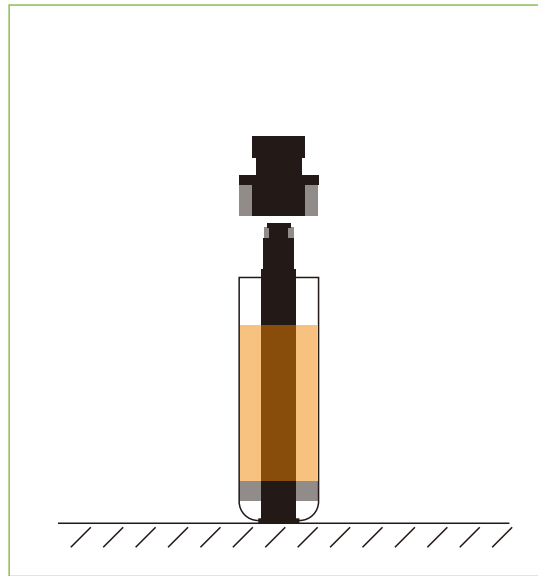

Stand cartridge vertically on a flat and solid surface for ensuring the stress point is on the metal connecting rod.

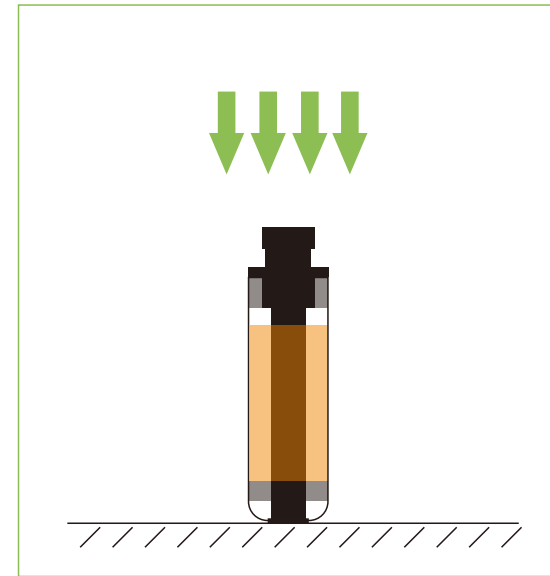

Vertically press the outer thread firmly

Notes:

1. Vertically pressing must be ensured, otherwise it is easy to crush the glass tank.
2. We highly recommend to use hand press machine to press the outer thread.

P10G Oil Filling