


Product Specification

Product model: **A10-T2-T102** (1.0ml)

Product type: **Cartridge**

Version	V1	Effective Date	01/26/2019
R&D Dept.	0011	Page	4

1. Dimension (Picture and Description)

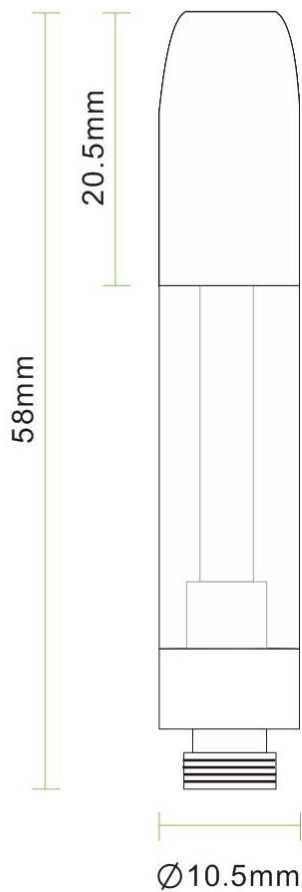

Description: Top fill vaporizer cartridge.

Appearance: There are no scratches, cracks, stains, uneven colors, unclear logos, and fades on the appearance of this product.

2. Features

- Transpring® next-gen heating core technology
- Pure flavor, large clouds
- Great performance with different oil

3. Main Technical Parameter

Specifications	
Tank Volume	1.0ml
Resistance	1.4 Ω
Aperture Size	2.0mm
Aperture Number	4
Dimension	Ø10.5x58mm
Weight	12.5g
Heating Core Material	Nichrome
Oil Drawing Material	Ceramic
Mouthpiece Material	Ceramic
Tank Material	Glass


4. How to Use

- 1) Unscrew the mouthpiece from the cartridge.

Turns counter clockwise to remove the mouthpiece and make sure that you put it somewhere safe.

- 2) Fill the tank with your favorite oil.

Gently put the syringe between the airway and the outer wall of the cartridge and fill the cartridge with oil at a proper speed.

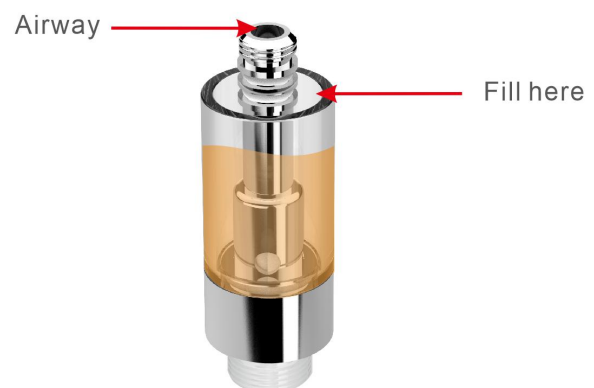

Notes:

- ▲ *Do not inject the oil into the airway!*
- ▲ *Do not top off the tank with oil.*
- ▲ *Keep the silicon cap when filling*

- 3) Screw the mouthpiece back on the cartridge securely.

Install the mouthpiece and twist clockwise to tighten immediately after filling. Do not over tighten.

- 4) Leave the cartridge standstill with upside down for at least 30 minutes before use.

5. Notes

- ▲ Pay attention to the shelf life of filled oil.
- ▲ Handle the glass cartridge with care. Do not crush or throw the cartridge.

6. Storage

- The storage temperature is $23 \pm 5^{\circ}\text{C}$ and the humidity is $50 \pm 10\%$ RH.
- Place in a cool, dark and ventilated place.
- Keep the oil-filled cartridge sealed storage and avoid direct sunlight.
- The storage period should not be too long, so as not to exceed the shelf life of oil.