


Product Specification

Product model: **DP610**

Product type: **Disposable**

Version	1	Effective Date	5/26/2020
R&D Dept.	0100	Page	4

1. Dimension (Picture and Description)

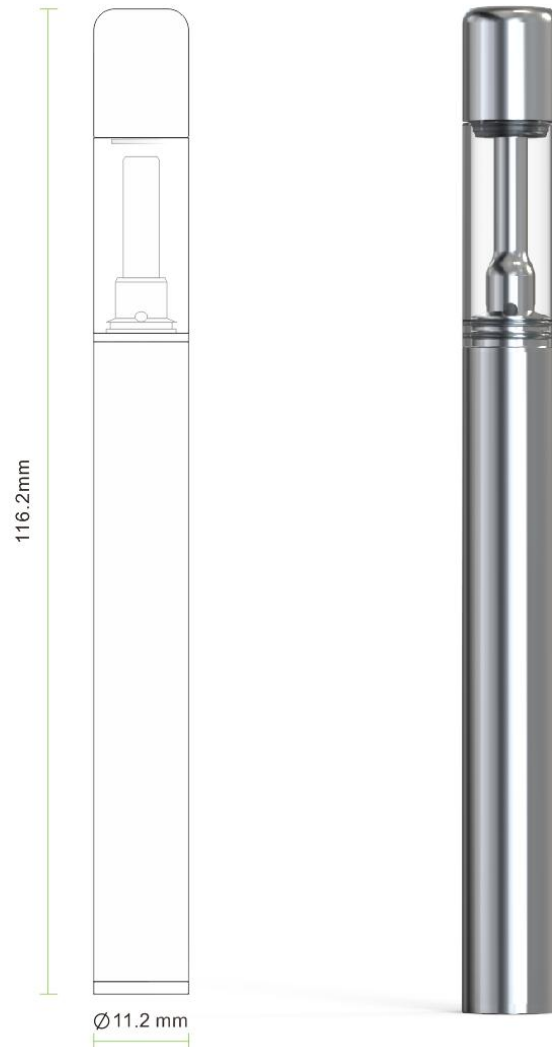

Description: Disposable vape pen

Appearance: There are no scratches, cracks, stains, uneven colors, unclear logos, and fades on the appearance of this product.

2. Features

- Inhale Activated
- Glass Oil Tank
- Flexible Production Process
- Hcore Next-Gen Heating Core Technology

3. Main Technical Parameter

Item	Parameter
Tank volume	1.0ml
Resistance	1.2 Ω
Aperture size	1.6mm
Aperture number	4
Battery capacity	360mAh
Heating core material	Ceramic
Tank material	Borosilicate glass
Weight	32.2g
Output voltage	3.5V
Charging voltage	4.5-6V
Battery life	300 cycles
Storage temperature	23°C±5°C
Working Temperature	-10°C ~ +50°C
Timeout protection	Flash twice
Short circuit protection	Stay on for 2 seconds
Low voltage protection	Flash 10 times
Overload protection	1.0Ω

4. How to Use

Inhale activated.

5. Oil Filling

1. Fill the tank with your favorite oil.

Gently put the syringe between the airway and the outer wall of the cartridge and fill the cartridge with oil at a proper speed.



2. Press the mouthpiece into tank with a special jig within 2 minutes.

We highly recommend to use capping machine to press the mouthpiece.

Notes

- ▲ Do not inject the oil into the airway!
- ▲ Do not top off the tank with oil.

6. Storage

1. The storage temperature is $23 \pm 5^{\circ}\text{C}$ and the humidity is $50 \pm 10\%$ RH.
2. Place in a cool, dark and ventilated place.
3. Keep the disposable sealed storage and avoid direct sunlight.
4. The storage period should not be too long, so as not to exceed the shelf life of oil.

7. Notes

1. Pay attention to the shelf life of filled oil.
2. Handle the glass cartridge with care. Do not crush or throw the cartridge.